

Figure 1 - Float Parts for Edo Model 88-1650,  
 88A-1650 and 89-2000

TABLE 1. FLOAT SPARE PARTS LIST  
KEY TO FIGURE 1

REF. NO.	PART NUMBERS				PART NAME
	FLOAT MODELS				
	88-1650	88-A-1650	89-2000	689-2130	
1	88-M-096	88-M-096	88-M-096	88-m-096	Cleat - Mooring
2	88-C-060-1	88-C-060-1	88-C-060-1	88-C-060-1	Pad - Strut Attachment - Fwd
3	88-C-060-2	88-C-060-2	88-C-060-2	88-C-060-2	Pad - Strut Attachment - Aft
4	89-B-032-7	89-B-032-7	89-B-032-7	89-B-032-7	Fitting - Strut Attach. Fwd & Aft
5	1575	1575	1575	1575	Cover Assembly - Deck Handhole
6	1582	1582	1582	1582	Gasket - Handhole Cover
7	88-W-072-3	88-W-072-3	88-W-072-3	88-W-072-3	Bracket - Water Rudder Deck
8	88-W-071	88-W-071	88-W-071	88-W-071	Bracket - Water Rudder Bottom
9	88-A-010-1L/R	88-A-010-21L/R	89-A-011-1L/R	689-0200-1	Top Assembly - Fwd (L or R Float)
10	88-A-010-2L/R	88-A-010-22L/R	89-A-011-2L/R	89-A-011-2L/R	Top Assembly - Aft (L or R Float)
11	88-A-010-3	88-A-010-3	89-A-011-3	689-0200-2	Bottom Assembly - Fwd
12	88-A-010-4	88-A-011-4	89-A-011-4	89-A-011-4	Bottom Assembly - Aft
13	88-A-012-1	88-A-012-1	89-A-013-1	689-0201-1L/2R	Skin - Fwd Top
14	88-A-012-2	88-A-012-2	89-A-013-2	89-A-013-2	Skin - Aft Top
15	88-A-012-3	88-A-012-3	89-A-013-3	689-0101-1L/2R	Skin - Fwd Bottom
16	88-A-012-4	88-A-012-4	89-A-013-4	89-A-013-4	Skin - Aft Bottom
17	88-K-060L/R	88-k-060L/R	89-K-061L/R	089A0020/21	Scallop (Booster)
18	88-K-050-8	88-K-050-8	88-K-050-10	88-K-050-10	Stiffener - Top (Oversized)
19	88-K-051-10	88-K-051-10	88-K-051-10	88-K-051-10	Stiffener - Bottom (Oversized Angle)
19A	88-K-051-13	88-K-051-13	88-K-051-13	88-K-051-13	Stiffener - Bottom (Oversized Tee)
20	88-A-010-5L/R	88-A-010-5L/R	89-A-011-5L/R	689-0202-1L/R	Deck Rail - Fwd Deck
21	88-A-010-6L/R	88-A-010-6L/R	89-A-011-6L/R	89-A-011-6L/R	Deck Rail - Aft Deck
22	88-A-010-8	88-A-010-8	88-A-010-8	88-A-010-8	Splice - Deck Rail
23	88-A-010-9	88-A-010-9	88-A-010-9	88-A-010-9	Plate - Deck Rail Splice
24	88-K-054-1L/R	88-K-054-1L/R	88-K-054-3L/R	689-0203-1L/2R	Chine - Fwd
25	88-K-054-2L/R	88-K-054-2L/R	88-K-054-4L/R	88-K-054-4L/R	Chine - Aft
26	88-A-010-10L/R	88-A-010-10L/R	88-A-010-10L/R	88-A-010-10L/R	Bracket - Chine
27	88-A-010-7	88-A-010-7	89-A-011-7	689-0103-1L/2R	Chine Strip - (Chine Reinforcing)
28	88-K-052-1	88-K-052-1	88-K-052-2	689-0102-1	Keel - Fwd (Section 0914)
29	88-K-053-1	88-K-053-1	88-K-053-2	88-K-053-2	Keel - Aft
30	88-M-712	88-M-712	89-M-091	89-M-091	Skeg
31	88-W-072-4	88-W-072-4	88-W-072-4	88-W-072-4	Skid - Stern
32	36912	-	-	-	Bumper Assembly - Bow - (For Conversion on Flt. Serials lto 384. Replacement on 385 and up.

TABLE 2. FLOAT SPARE PARTS LIST  
KEY TO FIGURE 1 (cont.)

REF. NO.	PART NUMBERS				PART NAME
	FLOAT MODELS				
	88-1650	88A1650	89-2000	689-2130	
32	-	-	36912	-	Bumper Assy - Bow - ( For conversion on Float Serial 1 to 1908, replacement on 1909 and up.)
32	-	36912	-	-	Bumper Assy- Bow
32a	35667	35667	35667	35667	Bumper Assy - Bow (Rubber) (where all 36912 Bumpers were used.)
33	88-B-030	88-B-030	88-B-030	88-B-030	Bulkhead - Station 1
34	88-B-031	88-B-031	88-B-031	88-B-031	Bulkhead - Station 2
35	88-B-040L/R	89-B-032L/R	89-B-032L/R	89-B-032L/R	Bulkhead Assembly - Sta. 3 (L/R Flt.)
36	-	-	89-B-033	89-B-033	Bulkhead Assembly - Sta. 3A
37	88-B-034	88-B-034	88-B-034	88-B-034	Step Assembly
38	88-B-039L/R	89-B-035L/R	89-B-035L/R	89-B-035L/R	Bulkhead Assembly - Sta. 4 (L/R Flt.)
39	88-B-036	88-B-036	88-B-036	88-B-036	Bulkhead Assembly - Sta. 5
40	88-B-037	88-B-037	88-B-037	88-B-037	Transom Assembly
41	88-W-070	88-W-070-2	88-W-070-2	88-W-070-2	Water Rudder Assembly - RH Float
41a	-	89-W-2000	89-W-2000	89-W-2000	Water Rudder Assembly - LH Float
42	88-W-075	88-W-075*	88-W-075	-	Rudder Post Assembly - RH Float
42a	-	88-W-075-7	88-W-075-7	-	Rudder Post Assembly - LH Float
42b	-	689-0301-1L/2R	689-0301-1L/2R	689-0301-1L/2R	Rudder Post Assy - Stainless Steel
43	88-W-075-6	88-W-075-6	88-W-075-6	88-W-075-6	Blade Stop (L/R Float)
44	88-W-078	88-W-078-1	88-W-078-1	88-W-078-1	Blade Assembly (L/R Float)
45	88-W-076-1LH	88-W-076-1LH	88-W-076-1LH	88-W-076-1LH	Blade Bracket (L/R Float)
46	88-W-076-2RH	88-W-076-2RH	88-W-076-2RH	88-W-076-2RH	Blade Bracket (L/R Float)
47	88-W-080	03075	03075	03075	Blade - Water Rudder (L/R Float)
48	88-W-079	88-W-079	88-W-079	88-W-079	Spring - Water Rudder (L/R Float)
49	38-081-1	38-081-1	38-081-1	38-081-1	Fairlead (2 Halves)
50	88-W-077-1	88-W-077-1	88-W-077-1	88-W-077-1	Bushing - Upper Post Hinge
51	88-W-077-2	88-W-077-2	88-W-077-2	88-W-077-2	Bushing - Blade Hinge
52	88-W-070-1	88-W-070-1	88-W-070-1	88-W-070-1	Spacer
53	62120*	62120*	62120*	62120	Drain System Kit (Opt. Equip)
	F3PX*	F3PX*	F3PX*	F3PX	Pump
	3661*	3661*	3661*	3661	Float Ball
	4182*	4182*	4182*	4182	Pump Socket
	62119*	62119*	62119*	62119	Drain Tube (Oversized)


TABLE 3. FLOAT SPARE PARTS LIST  
KEY TO FIGURE 1

REF. NO.	PART NUMBERS				PART NAME
	FLOAT MODELS				
	88-1650	88A1650	89-2000	689-2130	
54	-	40677*	40677	40677	Cleat Installation Float Aft
55	-	40678*	40678	40678	Cleat Installation Float Fwd
56	5042 (Retrofit)	5042	5042	5042	Gusset- Bottom Stiffener (Tee)

FIGURE 1a - FLOAT PARTS FOR EDO MODELS  
88-1650, 88A1650, 89-2000, and 689-2130

1101

Double qty for LH + RH

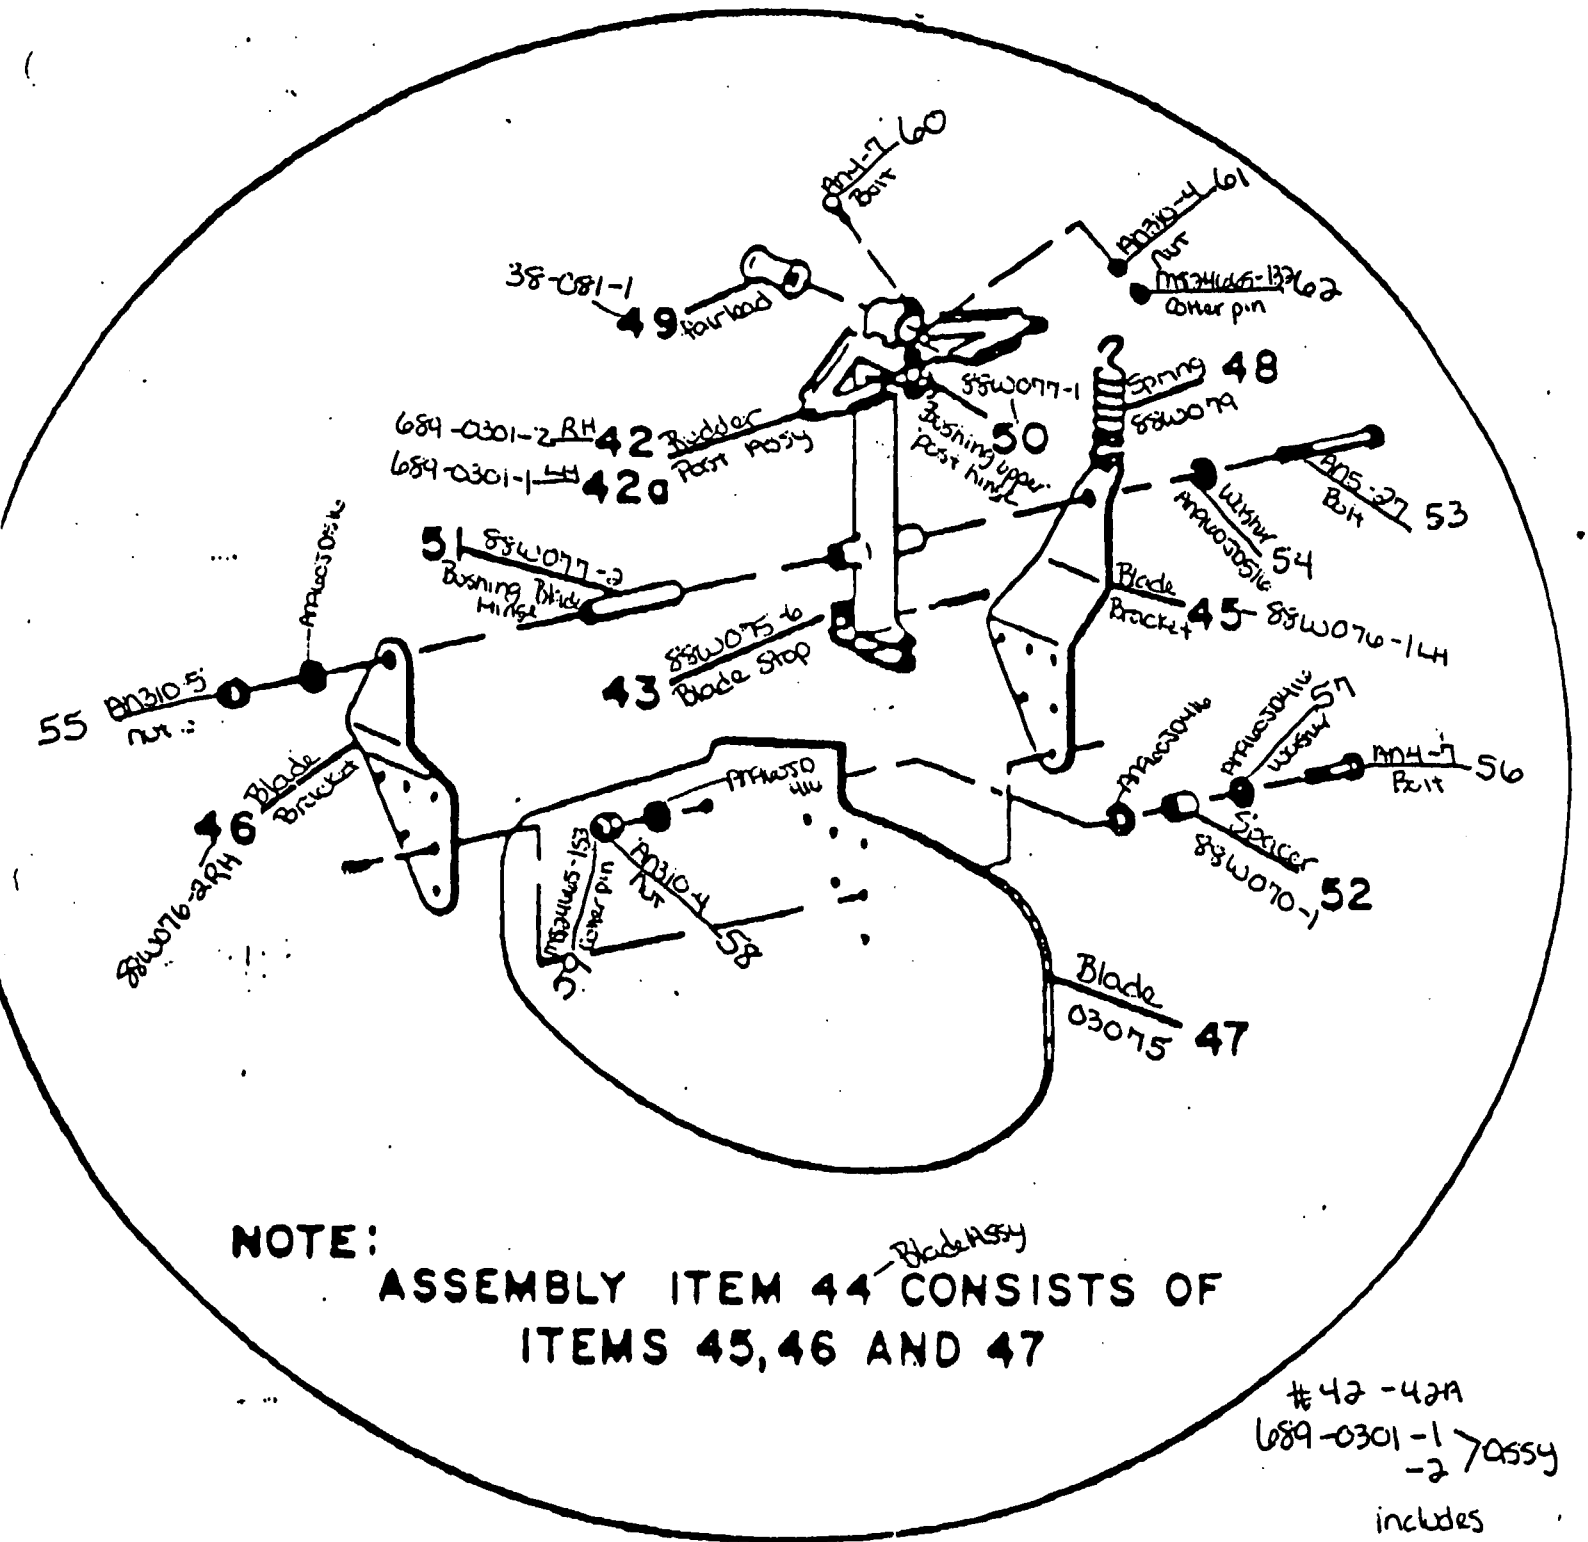

- #42 - 689-0301-2 (1)
- 42A - 689-0301-1 (1)
- #43 - 88W075-6 (1)
- 88W076-1LH (1)
- 46 - 88W076-2RH (1)
- 47 - 03075 (1)

- #48 - 88W079 (1)
- #49 - 38-081-1 (4)
- #50 - 88W077-1 (1)
- #51 - 88W077-2 (1)
- #52 - 88W070-1 (1)

- #53 - AN5-27 (1)
- #54 - ANAW0516 (2)
- #55 - AN310-5 (1)
- #56 - AN4-7 (1)
- #57 - ANAW0416 (3)
- #58 - AN310-4 (1)
- #59 - MS2465-153 (1)
- #60 - AN4-7 (1)
- #61 - AN310-4 (1)
- #62 - MS2465-132 (1)

- includes
- #43 - 1ea
  - #49 - 4ea
  - #60 - 1ea
  - #61 - 1ea
  - #62 - 1ea
  - 3