


RH SIDE OF INSTALLATION SHOWN

Figure 1- Installation Parts

Ref. No.	Part Number					Part Name
	Aerona 7AC	Aerona 11AC	Lucasbe BA, BE	Piper J3C-65	Piper PA-11	
1	92-A-0 10L	92-A-0 10L	92-A-0 10L	92-A-0 10L	92-A-0 10L	Float Assembly - Model 92-1400 LH (less wirepulls, spreader clamps) See Figure 2 for parts.
2	92-A-0 10R	92-A-0 10R	92-A-0 10R	92-A-0 10R	92-A-0 10R	Float Assembly - Model 92-1400 RH (less wirepulls, spreader clamps, water rudder assembly & control parts) See Figure 2 for parts.
3	92-S-237	92-S-237	92-S-235	92-S-239	92-S-229	Wirepull - Float Front
4	92-S-239	92-S-237	92-S-233L/R	92-S-239	92-S-229	Wirepull - Float Rear
5	92-S-115-3	92-S-115-3	92-S-115-3	92-S-115-2	92-S-115-3	Fitting - Deck Front Strut
6	92-S-115-2	92-S-115-1	92-S-115-2	92-S-115-1	92-S-115-1	Fitting - Deck Diagonal Strut
7	92-S-115-2	92-S-115-3	92-S-115-1	92-S-115-3	92-S-115-3	Fitting - Deck Rear Strut
8	92-S-101	92-S-101	92-S-101	92-S-101	92-S-101	Spreader Assembly
9	92-C-061-3L/R	92-C-061-3L/R	92-C-061-3L/R	92-C-061-3L/R	92-C-061-3L/R	Clamp - Spreader
10	92-S-125L/R	92-S-130L/R	92-S-182L/R	92-S-107L/R	92-S-222L/R	Strut Assembly - Front
11	92-S-124L/R	92-S-139L/R	92-S-183L/R	92-S-108L/R	92-S-223L/R	Strut Assembly - Diagonal
12	92-S-125L/R	92-S-140L/R	92-S-184L/R	92-S-109L/R	92-S-224L/R	Strut Assembly - Rear
13	92-S-121	92-S-121	60-S-117L/R	92-S-105L/R	92-S-220L/R	Fitting - Fuselage Front
14	92-S-128	92-S-136	-	-	-	Fitting - Fuselage Diagonal Strut
15	92-S-122L/R	92-S-137L/R	60-S-116	92-S-106L/R	92-S-221L/R	Fitting - Fuselage Rear
16	92-S-126	92-S-141	92-S-188	92-S-114	92-S-219	Wirepull - Fuselage Front
17	92-S-200-3	92-S-200-5	92-S-193-1	92-S-200-1	92-S-193-3	Wire Assembly - Front Cross
18	92-S-200-4	92-S-200-4	92-S-193-5	92-S-200-2	92-S-193-4	Wire Assembly - Rear Cross
19	-	-	92-S-186L/R	-	-	Step Assembly
20	92-W-070-10	92-W-070-10	92-W-070-10	92-W-070-10	92-W-070-10	Rudder Assembly - Water
20A	92-W-078	92-W-078	92-W-078	92-W-078	92-W-078	Blade Assembly - Water Rudder
20B	92-W-075	92-W-075	92-W-075	92-W-075	92-W-075	Post Assembly - Water Rudder
20C	92-W-079	92-W-079	92-W-079	92-W-079	92-W-079	Spring - Water Rudder
21	60-W-911	60-W-911	60-W-911	60-W-911	60-W-911	Pulley Installation - Float Deck
22	68-W-654	68-W-654	68-W-654	68-W-654	68-W-654	Fairlead Assembly - Float Deck
23	92-Ws-508	92-Ws-508	92-Ws-508-10	92-Ws-508	92-Ws-508	Arm - Water Rudder Control
24	89-Ws-501-2	89-Ws-501-2	-	89-Ws-501-2	89-Ws-501-2	Clamp - Pulley Attaching
25	60-W-911	60-W-911	60-W-911	60-W-911	60-W-911	Pulley Installation
26	-	-	38-081	-	-	Fairlead Installation - Fuselage
27	0929	0929	0929	0929	0929	Cable Assembly - Water Rudder Control
27A	D-376	D-376	D-376	D-376	D-376	Spring - Control Cable
28	0928-4	0928-4	0928-4	0928-4	0928-4	Cable Assembly - Water Rudder Lift
28A	0367	0367	0367	0367	0367	Handle - Lift Cable
29	92-Ws-509	92-Ws-509	92-Ws-509	92-Ws-509	92-Ws-509	Guide - Lift Cable
30	60-W-043	60-W-043	60-W-043	60-W-043	60-W-043	Hook - Lift Cable

Key to Figure 1

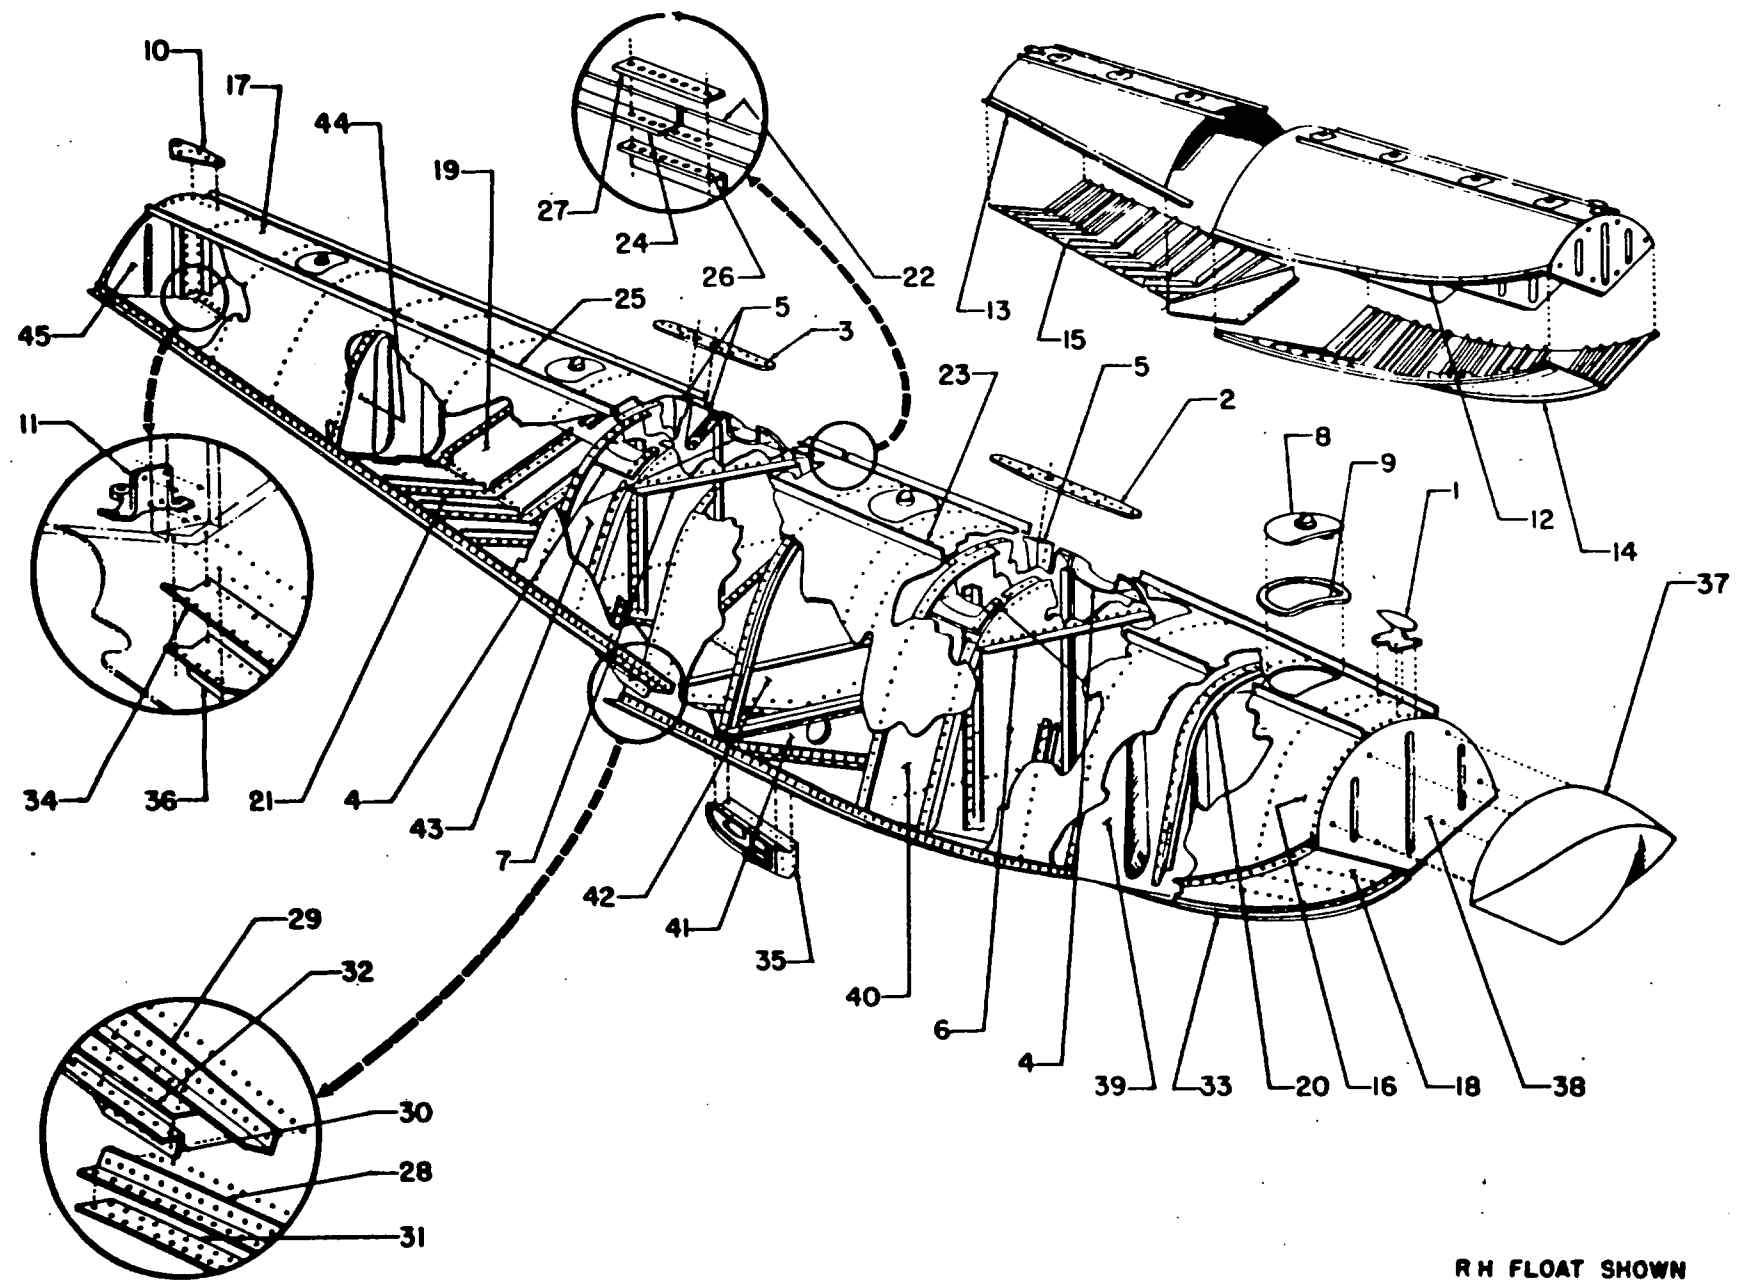

RH FLOAT SHOWN

Figure 2- Float Parts

<i>Ref. No.</i>	<i>Part Number</i>	<i>Part Name</i>
1	88-M-096	Cleat - Mooring
2	92-C-064-1	Pad - Strut Attaching Forward
3	92-C-064-2	Pad - Strut Attaching Aft
4	92-C-061-1L/R	Fitting - Spreader Attaching
5	92-C-062-1	Fitting - Strut Attaching
6	92-C-062-2	Beam Assembly - Deck Forward
7	92-C-063-2	Beam Assembly - Deck Aft
8	92-M-092	Cover Assembly - Deck Handhole
9	0949	Gasket - Handhole Cover
10	88-W-072-3	Bracket - Water Rudder Deck (R float)
11	88-W-071	Bracket - Water Rudder Bottom (R float)
12	92-A-010-1L/R	Top Assembly - Forward (L or R float)
13	92-A-010-2L/R	Top Assembly - Aft (L or R float)
14	92-A-010-3	Bottom Assembly - Forward
15	92-A-010-4	Bottom Assembly - Aft
16	92-A-013-1	Skin - Forward Top
17	92-A-013-2	Skin - Aft Top
18	92-A-013-3L/R	Skin - Forward Bottom
19	92-A-013-4	Skin - Aft Bottom
20	92-K-050	Stiffener - Top (oversize)
21	92-K-051	Stiffener - Bottom (oversize)
22	92-A-0 10-5L/R	Rail - Fwd Deck Inboard (L or R float)
23	92-A-0 10-12L/R	Rail - Fwd Deck Outboard (L or R float)
24	92-A-0 10-6L/R	Rail - Aft Deck Inboard (L or R float)
25	92-A-0 10-13L/R	Rail - Aft Deck Outboard (L or R float)
26	92-A-010-8	Splice - Deck Rail
27	92-A010-9	Plate - Deck Rail Splice
28	92-K-054-1L/R	Chine - Forward
29	92-K-054-2L/R	Chine - Aft
30	92-A-010-10L/R	Bracket - Chine
31	92-A010-7L/R	Strip - Fwd Chine Reinforcing
32	92-A010-14	Strip - Aft Chine Reinforcing
33	92-K-052	Keel - Fwd
34	92-K-053	Keel - Aft
35	92-M-091	Skeg
36	92-W-072-2	Skid - Stern (L float)
37	92-M-094	Bumper Assembly - Bow
38	92-B-030	Bulkhead - Station 1
39	92-B-031	Bulkhead - Station 2
40	92-C-062-1L/R	Bulkhead Assembly - Station 3 (L or R float)
41	92-B-033	Bulkhead Frame Assembly - Station 4
42	92-B-034	Step Assembly
43	92-C-063-1L/R	Bulkhead Assembly - Station 5 (L or R float)
44	92-B-036	Bulkhead - Station 6
45	92-B-037	Transom Assembly

Key to Figure 2